



Parts List for Y432030

Item No.	Description	Qt'y
Y432030-1	guild ring A	1
Y432030-2	nylon gasket *A	1
Y432030-3	y-ring *	1
Y432030-4	cover board	1
Y432030-5	o-ring *	1
Y432030-6	nylon gasket *B	1
Y432030-7	o-ring *	1
Y432030-8	guild ring B	1
Y432030-9	nylon gasket *C	1
Y432030-10	y-ring *	1
Y432030-11	big ram	1
Y432030-12	guild ring C	1
Y432030-13	allen screw	8
Y432030-14	steel ball	1
Y432030-15	adaptor	1
Y432030-16	ram	1
Y432030-17	guild ring D	1
Y432030-18	handle grip	1
Y432030-19	clip	2
Y432030-20	pin	2
Y432030-21	jack base	1
Y432030-22	coupler G1/4-6	1
Y432030-23	Ball vall	1
Y432030-24	allen screw	9
Y432030-25	o-ring *	1
Y432030-26	o-ring *	3
Y432030-27	air motor	1
Y432030-28	copper washer *	1
Y432030-29	valve block	1
Y432030-30	steel ball	1
Y432030-31	spring	1
Y432030-32	copper washer *	2
Y432030-33	spring seat	1
Y432030-34	steel ball	1
Y432030-35	Ball vall seat	1
Y432030-36	safety valve spring	1
Y432030-37	adjust screw	1
Y432030-38	seal *	1
Y432030-39	safety valve screw	1

Item No.	Description	Qt'y
Y432030-40	spring	1
Y432030-41	steel ball	1
Y432030-42	spring	1
Y432030-43	copper washer *	1
Y432030-44	allen screw	1
Y432030-45	copper washer *	1
Y432030-46	release valve	1
Y432030-47	oil flow vavle	1
Y432030-48	coupler G1/4-6	4
Y432030-49	elbow coupler	6
Y432030-50	multi-routine valve	1
Y432030-51	coupler G1/8-6	1
Y432030-52	elbow coupler	2
Y432030-53	vacuum valve	1
Y432030-54	bolt	1
Y432030-55	connection bracket	1
Y432030-56	saddle adaptor	2
Y432030-57	allen screw	9
Y432030-58	bushing	2
Y432030-59	wheel	2
Y432030-60	flat washer	2
Y432030-61	allen screw	2
Y432030-62	spring	1
Y432030-63	handle	1
Y432030-64	control rod	1
Y432030-65	handle grip	1
Y432030-66	handle sleeve	2
Y432030-67	control valve	1
Y432030-68	valve board	1
Y432030-69	screw	3
Y432030-70	muffler	2
Y432030-71	air inlet coupler	1
Y432030-72	lock pin	1
Y432030-73	lock pin	1
Y432030-74	adaptorA	1
Y432030-75	adaptorB	1
Y432030-76	adaptorC	1
Y432030-77	cover	1